



Basic Operations

On / Off	Press and hold the key in the lower right corner of the handset.
Executing a call	1. Slide up the slider and type the phone number including area code. If you made a type mistake press on to delete. 2. Press the key to dial.
Receiving a call	1. To answer the call slide the phone up while it is ringing or vibrating. If the slider is open - press . 2. To end the call press or slide down.
Silencing a call/vibration	Press on the right soft key silent for silencing the ringtone / vibration. Press again to reject the call.

Shortcut keys

Navigation keys 	In idle: Left navigation key: Access the New message menu. Press and hold the key for entering Silent Mode. Right navigation key: Access the Calendar. Upper navigation key: Access the Camera. Press and hold to enter the Memos. Lower navigation key: Access the Contacts menu. In menus: Navigating between the menus and their parts.
Soft key 	In idle: Access to the Main Menu. In menus: To complete the operation. During a call: Turning the speaker on/off.
Right soft key 	Access to Cellcom portal.
Left soft key	Access to My Stuff.
Multitasking 	Press to access the Multitask Menu and to navigate among the applications in use.
Clear Key 	While writing a text: deleting characters. Press and hold to delete all characters.
Makam Key 	Access to the Makam Menu.
Message Key 	Access to Messaging Menu.
The Hot Key 	Access to the preferred applications (to the user's choice)

Contacts

Saving a new contact	1. Type the desired number and press on the left soft key options . 2. Select Save number and choose either New contact or Update contact . 3. Press OK for confirmation. 4. Enter the contact name. 5. Navigate between the fields and enter the following details: Last name, Number 2, Email, Group, etc. 6. After inserting all the information press on the right soft key Done for saving the contact.
Searching a contact in Contact list	1. Press the lower navigation key to access the Contacts Menu. 2. Pressing the upper/lower navigation key scroll up to the desired contact, either type the initial letters of the contact's name. * Press to initiate a call. * Press the left soft key Options and then Send message in order to send a message to the contact.
Call log	Press key to display the calls history: All calls / Dialed calls / Received calls / Missed calls.
Speed dial	Press and hold the speed dial cell number.

Internet and Content Services*

This phone enables browsing the cellular network - Cellcom portal, downloading sounds and animations, applications, programs and games in JAVA technology.

Internet access	Press the right soft key to browse the Cellcom portal.
Browsing the network	To navigate between links use the navigation keys Press OK to select the desired link. Press the right soft key 'back' to go to previous pages.
Exit the browser	To end browsing press Exit .

Messages*

The phone enables sending and receiving text messages (SMS) in Hebrew, English, Russian, Arabic and Korean, as well as Multimedia messages (MMS) and E-mail messages.

Sending a new text message (SMS)*	<ol style="list-style-type: none"> 1. Press the left navigation key. 2. Enter the message content and press Send. 3. Use the navigation keys to add a contact from the Contacts list, or press number again to insert directly the desired phone number. 4. Press 'Send' to send the message.
Sending a new multimedia message (MMS)*	<ol style="list-style-type: none"> 1. Press the left navigation key. 2. Press the left soft key Options. 3. Press Insert to choose the item you wish to add: Image / Video / Sound, etc. 4. Enter the message content and press Send. 5. Use the navigation keys to add a contact from the Contacts list, or press number again to insert directly the desired phone number. 6. Press Send to send the message.
Reading a message	<ol style="list-style-type: none"> 1. Press the middle key Menu and choose Messages. 2. Select Inbox. 3. Use the navigation keys to choose the desired message and press View to display its content.

Camera

The camera enables taking pictures/recording videos with voice and sending them to other supporting devices or to Email.

Taking a picture or recording a video	<ol style="list-style-type: none"> 1. Press the upper navigation key, select Camera and then Camera / Video camera. A symbol of camera/video camera will be displayed at the top left corner of the display according to the chosen mode. 2. Press the left soft key Settings for personal customization of the camera options. 3. Press Take picture or REC to start recording video. To stop recording press Stop. 4. Press Delete to delete the picture/video. 5. Press Send to send the picture/video via multimedia message (MMS).
Viewing My Images/ My Videos	<ol style="list-style-type: none"> 1. In idel, press the left soft key My stuff. 2. Choose the desired folder: My images/My videos and press View. 3. To display the file use the navigation keys and press View.

Sound and display settings

Setting a ringtone	<ol style="list-style-type: none"> 1. In idel, press the left soft key My stuff. 2. Choose My sounds and then the desired file. 3. Press the left soft key Options and then Use as. 4. Choose one of the options: Voice Ringtone / Video Ringtone / Message Tone / Start-up / Shut down.
Setting the Ringtone Volume	<ol style="list-style-type: none"> 1. Press the middle key Menu, in the Menu choose Settings, then Profiles, then the desired profile. 2. Press the left soft key Options and select Personalize. 3. Press the Navigation keys to choose Ring volume option and adjust the volume. 4. Press the soft key Select to apply.
Setting a Wallpaper	<ol style="list-style-type: none"> 1. Press the middle key Menu, in the Menu choose Settings, Screen, Home screen and Wallpaper. 2. Select the option Images, in My stuff select Images, then choose the desired file. 3. Press on the soft key Select to apply.
Menu Language setting	<ol style="list-style-type: none"> 1. Press on the middle key Menu, and choose Settings, Phone, Language and Main language. 2. Select the desired language and press Select to apply.
Alarm clock	<ol style="list-style-type: none"> 1. Press on the middle key Menu, and select Tools. 2. Select Alarm clock and select New alarm to set the alarm clock. 3. Press on the right soft key Done to save the alarm.

Organizer

Calendar	<ol style="list-style-type: none"> 1. Press on the right navigation key in order to view the Calendar. 2. You can view and edit events, add new events, etc.
Settings	<ol style="list-style-type: none"> 1. Press on the middle key Menu, select Organizer. 2. Select Calendar, press the left soft key Options and choose Settings 3. In this menu you can edit the Calendar, send all the calendar events via Bluetooth to another supporting device, as well as backup and reproduce the calendar and To do list events.
Memo	<ol style="list-style-type: none"> 1. Press and hold the upper navigation key. 2. Select Edit to add a new memo. 3. To view the record in the Memo Menu press the left Navigation key Options and select Save to memo. 4. To view the memo on the desktop press the left Navigation key Options and select Show on home screen.

*Some of the services depend on the service provider and may be charged for.

